

# How do I read my meter?

## A quick guide on how to understand the display sequence

The display on the meter cycles through this sequence with consecutive presses of the right hand button.

The display will return to the default display automatically after approximately 20 secs; any button presses after this will start the sequence from the beginning.

The display has the reading (complete with any applicable register multiplier by the addition of "0" in a smaller font size), the reading energy quantity and an arrow showing whether import or export (arrow pointing right = import, arrow pointing left = export)



Test (888888)  
kW Rising Demand  
kVA Rising Demand  
Total imported kWh  
Total exported kWh\*  
Total imported kvarh  
Total exported kvarh  
Total kVAh  
Time  
Date  
kW MD Register  
kVA MD Register  
Billing kW MD Register  
Billing kVA MD Register  
Cum. kW MD Register  
Cum. kVA MD Register  
MD Reset Count  
Tariff Register 1  
Billing Tariff Register 1.....etc

\* Import/Export tariff only

*N.B. The meter is programmed to automatically scroll through the first 3 displays on this list.*

By reading the Billing Tariff registers on the first of each month, you can subtract the previously recorded Billing Tariff registers from the current Billing Tariff registers to find the kWh advance for the previous month.