

How do I read my meter?

A quick guide on how to understand the display sequence

The display on the meter cycles through this sequence with consecutive presses of the right hand button.

The display will return to the default display automatically after approximately 20 secs; any button presses after this will start the sequence from the beginning.

The display has the reading (complete with any applicable register multiplier by the addition of "0" in a smaller font size), the reading energy quantity and an arrow showing whether import or export (arrow pointing right = import, arrow pointing left = export)



Test (888888)
kW Rising Demand
kVA Rising Demand
Total imported kWh
Total exported kWh*
Total imported kvarh
Total exported kvarh
Total kVAh
Time
Date
kW MD Register
kVA MD Register
Billing kW MD Register
Billing kVA MD Register
Cum. kW MD Register
Cum. kVA MD Register
MD Reset Count
Tariff Register 1
Billing Tariff Register 1.....etc

N.B. Other displays may follow but are not required for billing purposes

* Import/Export tariff only

By reading the Billing Tariff registers on the first of each month, you can subtract the previously recorded Billing Tariff registers from the current Billing Tariff registers to find the kWh advance for the previous month.